



HermesDDS AP  
User's Manual

v3.0

## Copyright, Trademarks and Important Information

### Copyright

© 2014 UniSVR Global Information Technology Corp.

### Trademarks

UniArgus is a registered trademark of UniSVR Global Information Technology Corp.

Microsoft and Windows are registered trademarks of Microsoft Corporation.

All other trademarks mentioned in this document are trademarks of their respective owners.

### Disclaimer

This document is intended for general information purpose only, and due care has been taken in its preparation. Any risk arising from the use of this information rests with the recipient, and nothing herein should be construed as constituting any kind of warranty. UniSVR Global Information Technology Corp. reserves the right to make adjustments without prior notification. All names of people and organizations used in this document's examples are fictitious. Any resemblance to any actual organization or person, living or dead, is purely coincidental and unintended.

## Limited Warranty

### Limited Warranty Statement

UniSVR Global Information Technology Corp. (“UniSVR”) warrants its products to be free from defects in workmanship and materials, under normal use and service, for the applicable warranty term.

As new technologies emerge, older technologies become obsolete and UniSVR will, at its discretion, replace an older product in its product line with one that incorporates these newer technologies. At that point, the obsolete product is discontinued and no longer support.

### Warranties Exclusive

If a UniSVR product does not operate as warranted above, customer’s sole remedy shall be repair or replacement of the product in question, at UniSVR’s option. The foregoing warranties and remedies are exclusive and are in lieu of all other warranties or conditions. Express or implied, either in fact or by operation of law, statutory or otherwise, including warranties or conditions of merchantability and fitness for a particular purpose. UniSVR neither assumes nor authorizes any other person to assume for it any other liability in connection with the sale, installation, maintenance or use of its products. UniSVR shall not be liable under this warranty if its testing and examination disclose the alleged defect in the product does not exist or was caused by customer’s or any third person’s misuse, neglect, improper installation or testing, unauthorized attempts to repair, or any other cause beyond the range of the intended use, or by accident, fire, lightening, or other hazard.

### Limitation of Liability

In no event, whether based in contract or tort (including negligence), shall UniSVR be liable for incidental, consequential, indirect, special, or punitive damages of any kind, or for loss of revenue, loss of business, or other financial loss arising out of or in connection with the sale, installation, maintenance, use, performance, failure, or interruption of its products, even if UniSVR or its authorized reseller has been advised of the possibility of such damages. Some country do not allow the exclusion of implied warranties or the limitation of incidental or consequential damages for consumer products, so the above limitations and exclusions may not apply to you. This warranty gives you specific legal rights, which may vary from country to country. Nothing in this warranty shall be taken to affect your statutory rights.

## Table of Contents


Copyright, Trademarks and Important Information.....	11
<b>1. General Introduction to HermesDDS Service and HermesDDS AP .....</b>	<b>5</b>
<b>2. Register for HermesDDS Service.....</b>	<b>5</b>
<b>3. Add A New Device to Your HermesDDS Service.....</b>	<b>6</b>
<b>4. Manager Your Device .....</b>	<b>9</b>
<b>5. Download and Install HermesDDS AP .....</b>	<b>12</b>
<b>6. Use HermesDDS AP.....</b>	<b>15</b>


## 1. General Introduction to HermesDDS Service and HermesDDS AP

HermesDDS AP is an interface for users to easily enjoy HermesDDS Service. HermesDDS Service is a cloud end service which allows users to view and share real-time images and services such as file transferring, printing, managing NEDs (network edge devices) via the Internet without making settings of firewalls and DDNS. Users can manage their devices remotely and securely.


## 2. Register for HermesDDS Service

2.1 Go to [www.hermesdds.com/login.aspx](http://www.hermesdds.com/login.aspx) and click [Free Register].

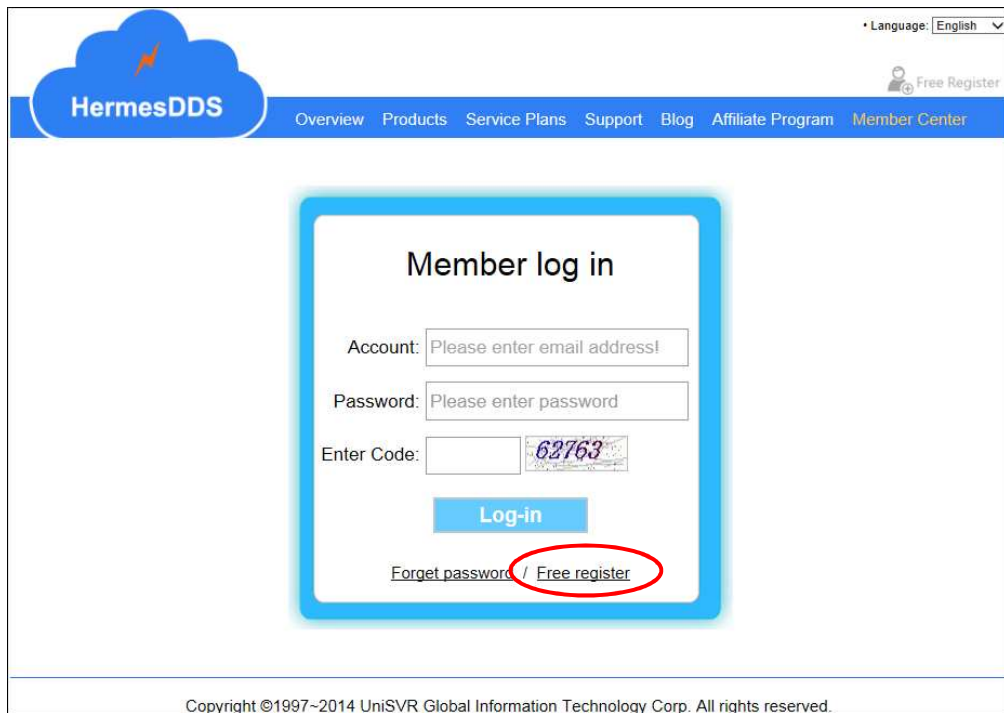

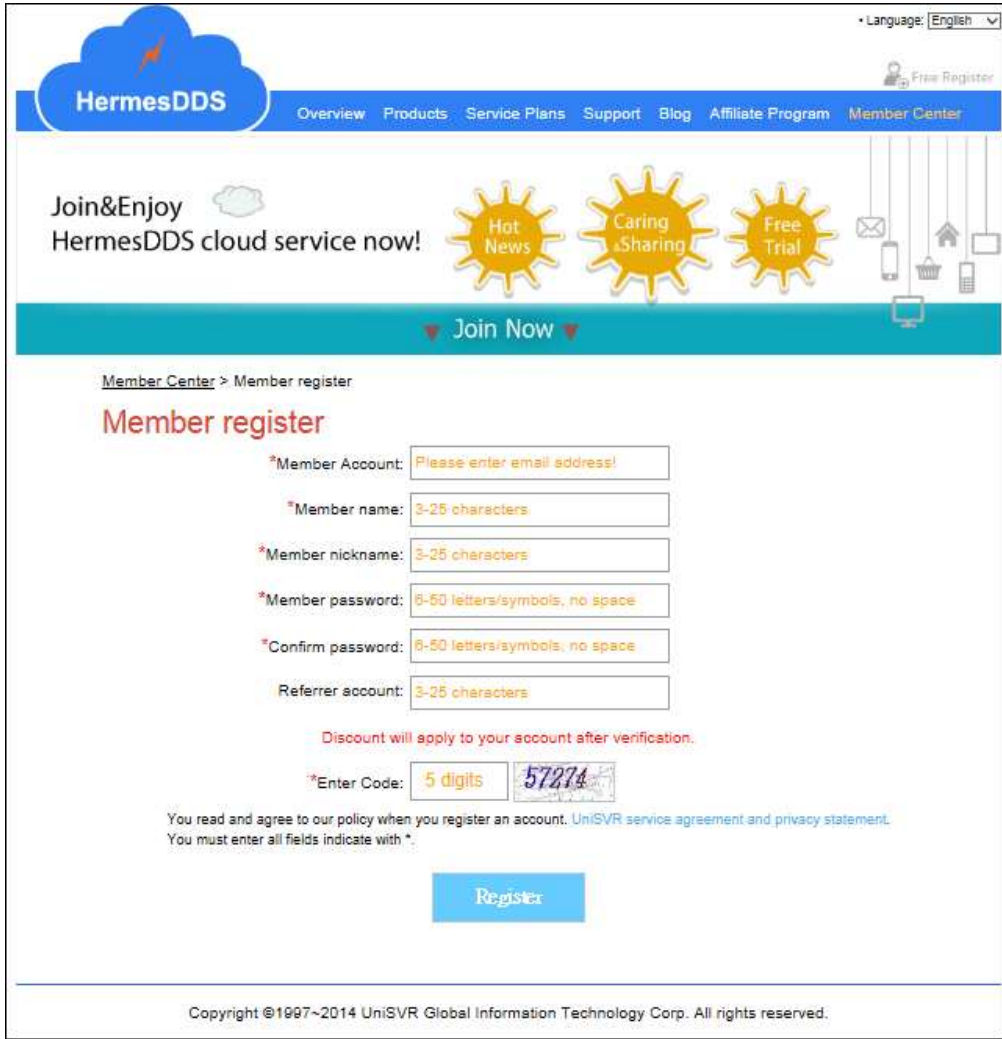

2.2 Activate the verification letter sent to your registered e-mail address and login to HermesDDS Member Service Portal with your registered Member ID, Password, and Confirmation Code displayed on the page.

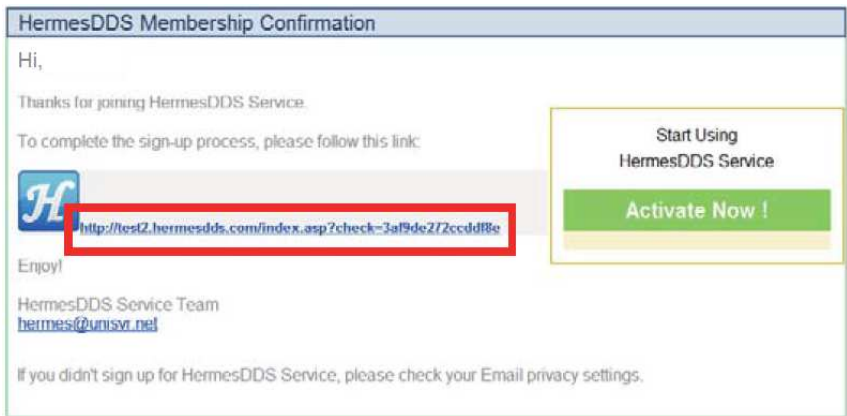

### 3. Add A New Device to Your HermesDDS Service

- 3.1 Log in with your Member ID, Password, and Confirmation Code.
- 3.2 Click [Device Manager] in the top column after you login.



Homepage > Device Manager

### Device Manager

Option	Brand	Device model	Device name	Device nickname	Package	Start date	Termination date	Setting	Share
1	UniSVR	eLook Mobile Cam	Cam_GT-8100	Cam_GT-8100	Free-1 Year	2014-03-04	2015-03-04	✔	✕
2	UniSVR	H99 / H99	H99	H99	UniSVR_Task_Pcam...-1 Year	2014-03-07	2015-03-07	✔	✕
3	UniSVR	M099 / M099	M099	M099	M099-1 Year	2014-03-10	2015-03-10	✔	✕
4	UniSVR	UE Software / NVR	UE	UE	UE_Senior-1 Year	2014-03-10	2015-03-10	✔	✕
5	UniSVR	JP99	JP99	JP99	Prime99-1 Year	2014-03-10	2015-03-10	✔	✕
6	UniSVR	JP99 / JP99	JP99	JP99	File_Transfer_Gli-1 Year	2014-03-10	2015-03-10	✔	✕
7	UniSVR	H999	H999-1-2-1	H999-1-2-1	UniSVR_99-1 Year	2014-03-10	2015-03-10	✔	✕
8	UniSVR	M099 / M099	M099-1	M099-1	M099-1 Year	2014-03-10	2015-03-10	✔	✕
9	UniSVR	H99 / H99	H99-1	H99-1	UniSVR_Task_Pcam...-1 Year	2014-03-17	2015-03-17	✔	✕
10	UniSVR	eLook Mobile Cam	Cam_OTV226	Cam_OTV226	Free-1 Year	2014-03-25	2015-03-25	✔	✕
11	UniSVR	eLook Mobile Cam	Cam_K00E	Cam_K00E	Free-1 Year	2014-03-27	2015-03-27	✔	✕
12	UniSVR	M099 / M099	M099-10-09-22-09...	M099-10-09-22-09...				✔	✕
13	UniSVR	M099 / M099	M099	M099				✔	✕
14	UniSVR	eLook Mobile Cam	Cam_XDP-0300	Cam_XDP-0300	Free-1 Year	2014-04-14	2015-04-14	✔	✕
15	UniSVR	eLook Mobile Cam	Cam_H97S-AndroidV...	Cam_H97S-AndroidV...	Free-1 Year	2014-04-15	2015-04-15	✔	✕
16	UniSVR	eLook Mobile Cam	Cam_GT-N7100	Cam_GT-N7100	Free-1 Year	2014-04-16	2015-04-16	✔	✕
17	UniSVR	eLook Mobile Cam	Cam_L716	Cam_L716	Free-1 Year	2014-04-21	2015-04-21	✔	✕
18	UniSVR	UE Software / NVR	NVR-10-04-22-03-PO...	NVR-10-04-22-03-PO...	NVR99-2 Years	2014-03-07	2016-03-07	✔	✕
19	UniSVR	JP99	JP99_3	JP99_3				✔	✕
20	UniSVR	eLook Mobile Cam	Cam_K9Track	Cam_K9Track	Free-1 Year	2014-03-10	2015-03-10	✔	✕
21	UniSVR	H99 / H99	H99-3	H99-3	90 Day-Trial-90 Days	2014-02-13	2014-04-11	✔	✕
22	UniSVR	H999	H999-3	H999-3	90 Day-Trial-90 Days	2014-02-13	2014-04-11	✔	✕
23	UniSVR	UniVRT Software / L	VRT	VRT	90 Day-Trial-90 Days	2014-02-13	2014-04-13	✔	✕
24	UniSVR	eLook Mobile Cam	Cam_K00L	Cam_K00L	Free-1 Year	2014-02-23	2015-02-23	✔	✕
25	UniSVR	H999	H999-4	H999-4				✔	✕
26	UniSVR	H99 / H99	H99-1	H99-1				✔	✕
27	UniSVR	UniPCC_Windows_Edi...-H999	H999_3	H999_3	UniPCC-W-Trial-90 Days	2014-04-11	2014-07-10	✔	✕
28	UniSVR	UniPCC_Windows_Edi...-UE Software / NVR	UE_3	UE_3	UniPCC-W-Trial-90 Days	2014-04-11	2014-07-10	✔	✕
29	UniSVR	UniPCC_Windows_Edi...-M099 / M099	M099_3	M099_3	UniPCC-W-Trial-90 Days	2014-04-11	2014-07-10	✔	✕
30	UniSVR	UniPCC_Windows_Edi...-JP99	JP99_3	JP99_3	UniPCC-W-Trial-90 Days	2014-04-11	2014-07-10	✔	✕
31	UniSVR	UniPCC_Windows_Edi...-JP99 / JP99	JP99_3	JP99_3	UniPCC-W-Trial-90 Days	2014-04-11	2014-07-10	✔	✕
32	UniSVR	UniPCC-H999	H999_3	H999_3				✔	✕
33	UniSVR	UniPCC-UE Software / NVR	UE_4	UE_4				✔	✕
34	UniSVR	UniPCC-JP99	JP99_4	JP99_4				✔	✕
35	UniSVR	UniPCC-JP99 / JP99	JP99_3	JP99_3				✔	✕

Add Device

[Overview](#) [Products](#) [Service Plans](#) [Support](#) [Blog](#) [Affiliate Program](#) [Member Center](#)

[Log out](#)  
HL |

Home
Account Setting
Device Manager
Buy Service
Service Log

Homepage > Device manager > Add device

### Add device

Brand name: UniSVR

Device model: --Please select device model--

[Device name will be used on purchased HermesDDS device ]

Back
Add device

Homepage > Device manager > Add device

## Add device

Brand name: UniSVR

Device model: -- Please select device model --  
AFSS / AFSB  
AFSS  
eLook Mobile Cam  
HISS / HISB  
HWSS  
MIOSS / MIOSB  
UE Software / NVR  
UniGate  
UniPCC  
UniPCC\_Windows\_Edition  
UniVRT Software /IVRT

[Device name will be used on purchased HermesDDS device]

[Back](#) [Add device](#)

Homepage > Device manager > Add device

## Add device

Brand name: UniSVR

Device model: HWSS

[Device name will be used on purchased HermesDDS device]

Device name: HWSS-5 ✕

Device name is in used already!

Purchase HermesDDS service, make device is cloud ready

[Back](#) [Add device](#)

Homepage > Device manager > Add device > Device info

## Device info

Complete adding new device!

Brand name: UniSVR

Device model: HWSS

Device name: HWSS-5

Device nickname: HWSS-5

[Device manager](#)

3.3 Purchase the service immediately or later.

3.3.1 Purchase the service immediately.

3.3.1.1 Click [Buy Service].

Homepage > Buy service

### Buy service

Leave the following cell empty if there is no referrer.

Referrer account:

Option	Brand	Device model	Device name	Expiration date	Paid package	Price (USD)	Purchase quantity	Subtotal (USD)
1	UniSVR	AFSS / AFSSB	AFSS	2015/03/10	Year--1 Year	\$20.00	0	\$0.00
2	UniSVR	APSS	APSS	2015/03/10	Year--1 Year	\$20.00	0	\$0.00
3	UniSVR	APSS	APSS_3		Year--1 Year	\$20.00	0	\$0.00

Homepage > Buy service > Service detail

### Service detail

Option	Brand	Device model	Device name	Expiration date	Paid package	Price(USD)	Purchase quantity	Subtotal (USD)	
1	UniSVR	AFSS / AFSSB	AFSS	2015/03/10	Year	\$20.00	1	\$20.00	
Total amount qualified							Total	1	\$20.00
Discount							Bulk discount		-\$0.00
\$150									
\$300									
\$500									
							Price after discount	\$20.00	

Homepage > Buy service > Service detail > Invoice

### Invoice

We will send you an invoice by mail within one workday.

## 4. Manager Your Device

4.1 You can edit the device and contact information via “Device Manager”.


4.1.1 Click [Device Manager] in the top column.

Homepage > Device Manager

### Device Manager

Option	Brand	Device model	Device name	Device nickname	Package	Start date	Termination date	Setting	Share
1	UniSVR	eLock Mobile Cam	Cam_GT-19100	Cam_GT-19100	Free--1 Year	2014/03/04	2015/03/04	<input type="checkbox"/>	<input type="checkbox"/>
2	UniSVR	HISB / HISB	HISB	HISB	UniSVR_Test_IPcam...-1 Year	2014/03/07	2015/03/07	<input type="checkbox"/>	<input type="checkbox"/>


You can modified your device name and nickname.

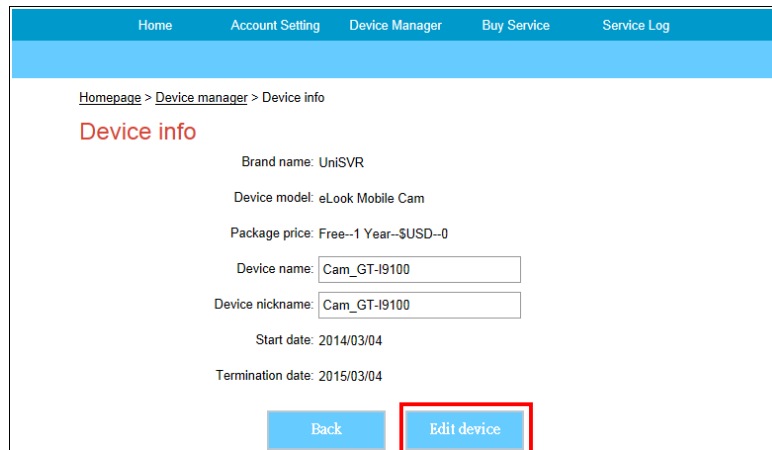


4.2 You can share your device with your contact via “Device Manager.”

4.2.1 Click [Device Manager] in the top column.


4.2.2 Click the envelope icon under “Share” of the device that you want to share with your contact.

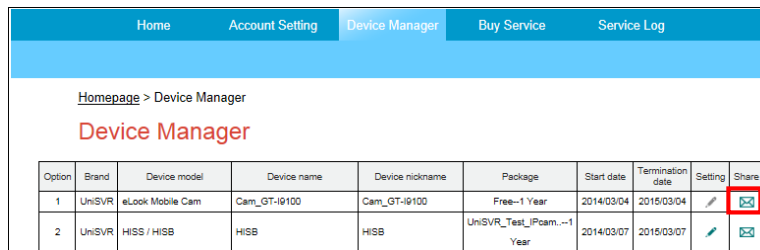


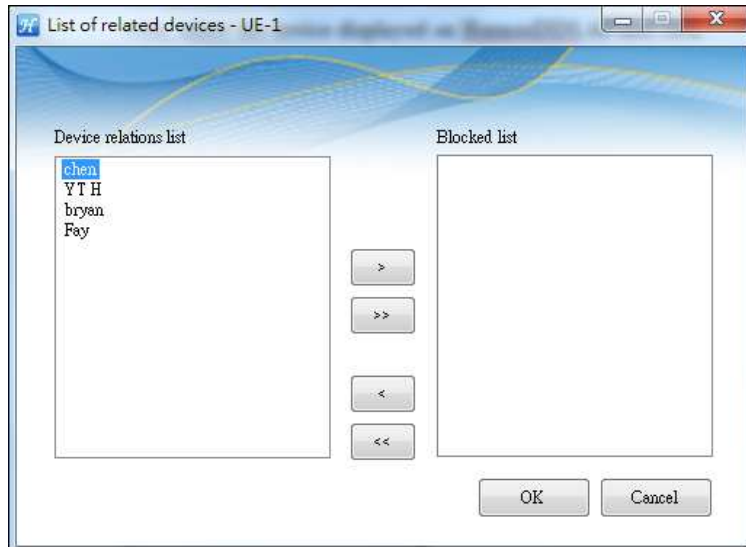
4.2.3 Select the contact whom you want to share the device with and click [Add]. Or you can type the e-mail address of the non-HermesDDS member who you want to share the device with into the blank.

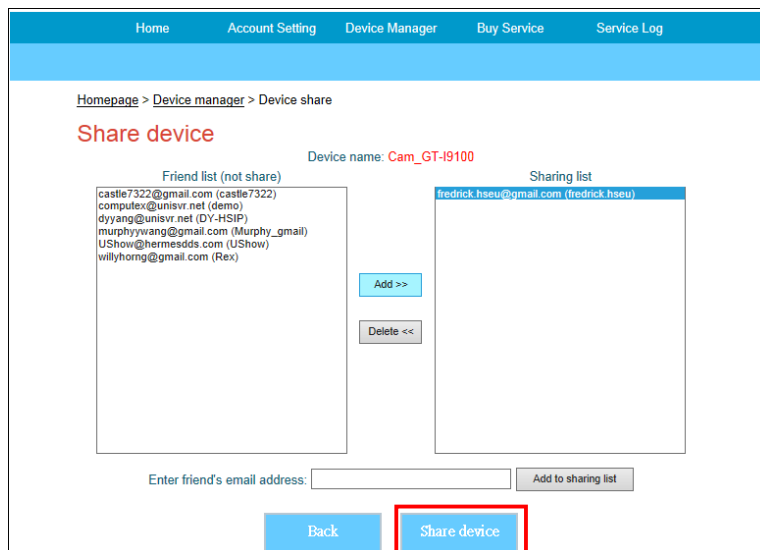

- 4.2.4 Click [Share device]. Your contact will receive an invitation letter. When he/she logs in to HermesDDS AP, he/she will find the device which you want to share with him/her in the list of Awaiting Request. After he/she accepts your request and re-log in to HermesDDS AP, he/she can share your device.
- 4.2.5 If you want to delete a contact whom you have shared files/folders with, select the device displayed on HermesDDS AP and click [Contacts] and click [Device relations list].

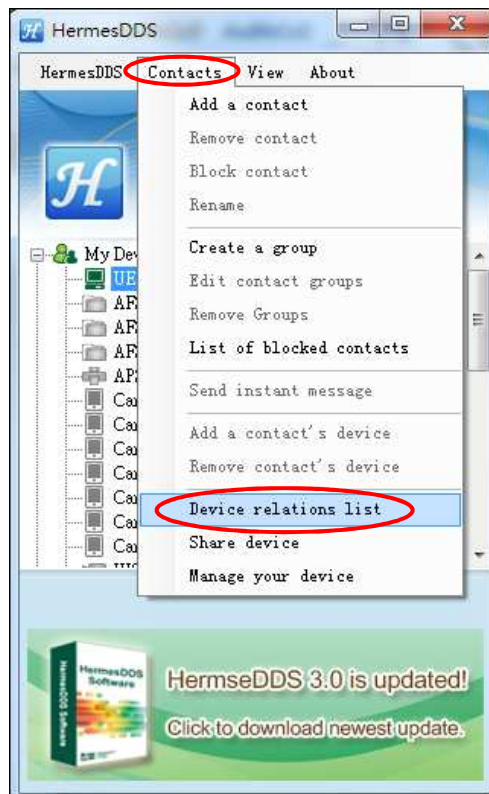


- 4.2.6 Select the contact whom you no longer want to share the device with and click  to add him/her to the blocked list. Click [OK], then he/she cannot share your device any more.



## 5. Download and Install HermesDDS AP

- 5.1 Click [Run HermesDDS AP Now!] to download HermesDDS AP at <http://www.unisvr.net/download.aspx>

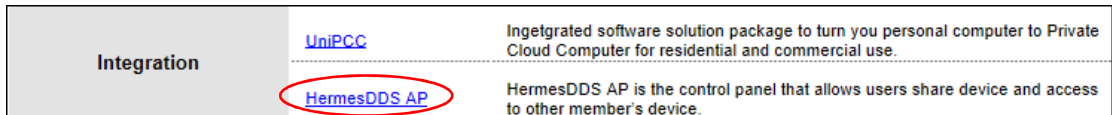


- 5.2 Select the langue which you want to use on HermesDDS AP and click [Next].




5.3 Click [Next] to proceed.



5.4 Select “I agree to the terms of this license agreement” and click [Next].

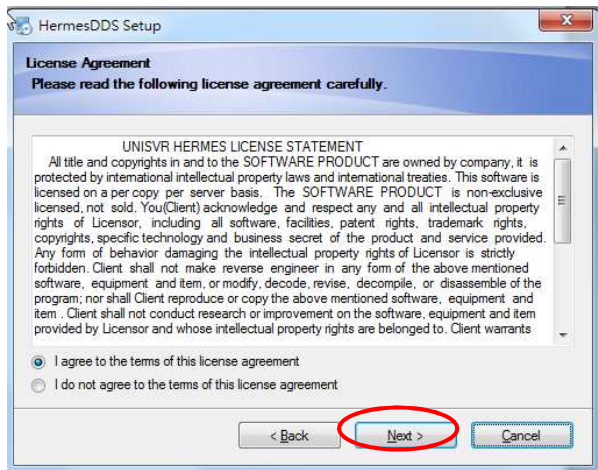


5.5 Select the folder to install the software and click [Next].

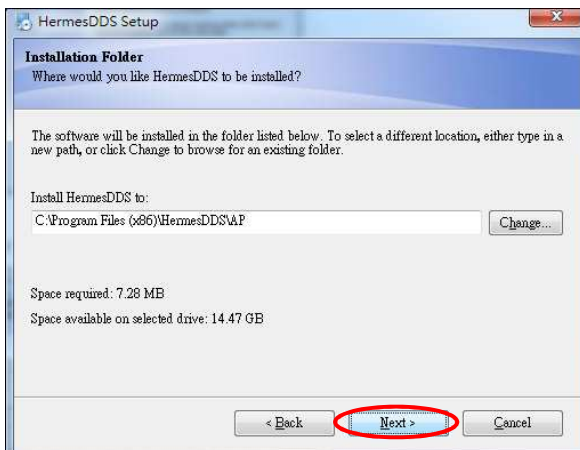

## UniSVR HermesDDS AP

---

5.6 Click [Next] to proceed.

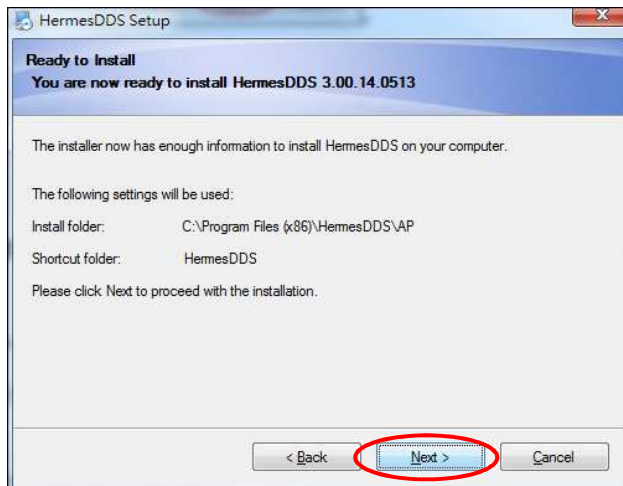


5.7 Click [Finish] to complete the installation.




### 6. Use HermesDDS AP

6.1 Click the icon of HermesDDS AP in the Start Menu to run the software.

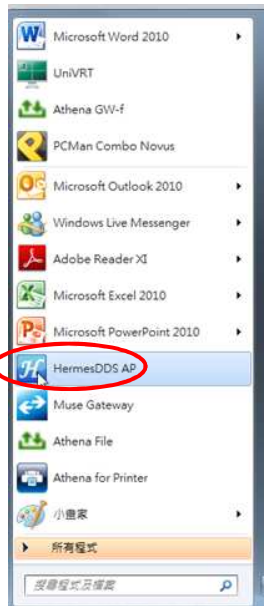

6.2 Login to HermesDDS AP with your HermesDDS Member ID and Password.

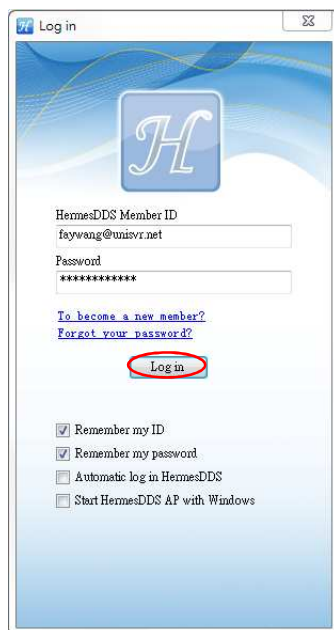

6.3 You may see all your contacts and devices in a tree structure. If you want to view the devices based on their types, click [View] on the toolbar and select the type of devices which you want to view. Only the selected type of devices will be displayed.

## UniSVR HermesDDS AP



6.4 You may click on your contact's nickname to examine the device(s) which he/she has shared with you. The types of devices are distinguished by their icons.



6.5 If the icon of device is green, you can use it via the Internet. If the icon of device is yellow, you can only use it via the Intranet.



## UniSVR HermesDDS AP

6.6 If you want to manage your device, click [HermesDDS] on the toolbar and click [Manage Your Account]. You will be directed to HermesDDS Member Service Portal. In addition, you may change the language to Traditional Chinese or Simplified Chinese by clicking [Language Settings].

